









 





 



 





 

 

 
 
 

 
 
 

 

 





 

 

 



 

 










 




Original	Rechange	Original	Rechange
 Power	 Power	 Options	 Setup / OPT /
 [+]	 Picture / Format	 Up	 Up
 [i+]	 Info / Angle	 Down	 Down
 <</<l	 << / Tune-	 Right	 Right
 Play Bravia Sync	 Play / Slow	 Left	 Left
 Pause Bravia	 Pause / Step / Freeze	 OK	 OK
 >>/l>	 >> / Tune+	 Home	 Menu / Home
 Sync Menu Bravia Sync	 D.Menu / Top	 Red	 Red / Netflix / Search
 Stop Bravia Sync	 Stop / Hold	 Green	 Green / APP / Repeat
 Theatre Bravia	 TV/Radio /	 Yellow	 Yellow / YouTube / Repeat
 Digital	 Display / Media	 Blue	 Blue / Prime Video / Random
 Analog	 Smart / List	 1	 1
 [...]	 Subtitle / EQ	 2	 2
 Audio	 Audio / Lang I/II	 3	 3
 Guide	 Guide / EPG / -/--	 4	 4
 Source	 AV / Input / RDS	 5	 5
 Return	 Back / Return	 6	 6





Original	Rechange
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
0	HDMI - BAT 0
[Menu]	GOTO TEXT Text / Goto
[Heart]	SHIFT + [PC FAV MARKER] Shift + Fav / Marker / PC
[+]	[+ VOL] Vol+
[-]	[- VOL] Vol-
[Mute]	[DIMMER MUTE] Mute / Dimmer
[PROG +]	[+ CH PAGE] CH+ / Page+
[PROG -]	[- CH PAGE] CH- / Page-
[Back]	[PC FAV MARKER] Fav / Marker / PC

Original	Rechange

