

















 







Original	Rechange
 Power	 Power
 Muting	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 << / Slow/Tune-	 << / Tune-
 Tuning+ / Slow	 >> / Tune+
 I<< / Preset-	 I<< / Preset-
 >> I / Preset+	 >> I / Preset+
 Bass Level	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Open/Close	 Eject / Surround
 Band	 Picture / Format
 Sleep	 Sleep / Timer
 Tv/Video	 TV/Radio /
 DVD Menu	 D.Menu / Top

Original	Rechange
 DVD Setup	 Setup / OPT /
 Name	 Text / Goto
 AMP Menu	 Menu / Home
 Up	 Up
 Angle	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Clear	 Exit / Cancel / Clear
 Down	 Down
 Return	 Back / Return
 Vol+	 Vol+
 Memory	 Smart / List
 Vol-	 Vol-
 Display	 Display / Media
 1	 1
 2	 2





Original	Recharge

Original	Recharge



