


 
 
 






 
 



 



 

 
 



 
 

 
 


 

 

 

 






 
 



 




 
 



















 



 
 
 
 
 
 
 

 




Original	Recharge	Original	Recharge
 Power	 Power	 Red	 Red
 1	 1	 Green	 Green
 2	 2	 Yellow	 Yellow
 3	 3	 Blue	 Blue
 4	 4	 Guide	 Guide
 5	 5	 Rec List	 List
 6	 6	 Input	 AV
 7	 7	 *	 Menu
 8	 8	 Up	 Up
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 [i+]	 DISPLAY Info	 Left	 Left
 [≡]	 REPEAT Text	 OK	 Ok
 Google Play	 Shift + Media	 Back	 Back
 Netflix	 Media	 TV	 TV/R

Pas de fonction de commande vocale.





Original	Recharge	Original	Recharge
 Home	 Smart	 Exit	 Exit
 Vol+	 Vol +		
 Vol-	 Vol -		
 Recall	 Pre Ch		
 Mute	 Mute		
 CH+	 Ch +		
 CH-	 Ch -		
 Audio	 Dual		
 [...]	 Subt		
 Help	 D. Menu		
 <<<	 <<<		
 Play	 Play		
 >>>	 >>>		
 Rec	 Rec		
 Pause	 Pause		

Pas de fonction de commande vocale.

