



Original		Recharge		Original		Recharge	
	Power		Power		Source		AV
	Power Tv		Shift + Power		Picture Mode		Format
	Eject		Eject		O)))		Dual
	1		1		[...]		Subt
	2		2		Camera		TV/R
	3		3		SUR		Options
	4		4		I<<		I<<
	5		5		>>I		>>I
	6		6		Zoom		Shift + Eject
	7		7		Picture Navi		Media
	8		8		<<		<<
	9		9		>>		>>
	0		0		←		Ch -
	Clear		Exit		→		Ch +
	Time/Text		Text		Play		Play
	Vol+		Vol +		Pause		Pause
	Vol-		Vol -		Stop		Stop





Original	Recharge	Original	Recharge
Up	Up		
Right	Right		
Down	Down		
Left	Left		
Enter	Ok		
Display	Info		
Top Menu	+ Shift + Menu		
Menu	Menu		
Return	Back		

Original	Recharge

