



 
 

 






 
 












 


 









Original		Recharge		Original		Recharge	
	Power		Power		Enter		Pre Ch
	TV		TV/R		Clear		Exit
	Open / Close		Eject		Function		Smart
	System Menu		Shift + Menu		Tone		Media
	Sleep		Sleep		Sound Field		Dual
	TV Input		AV		DVD Top Menu		Menu
	Display		Info		DVD Menu		D. Menu
	1		1		Up		Up
	2		2		Down		Down
	3		3		Right		Right
	4		4		Left		Left
	5		5		OK		Ok
	6		6		Return		Back
	7		7		I<< / Preset -		I<<
	8		8		← / <II Step		Shift + Left
	9		9		→ / Step II>		Shift + Right
	0		0		>>I / Preset +		>>I



