









 

 




















 


































 




Original	Rechange	Original	Rechange
Power	 Power	Tape 1 Hall/Ats	 Stop / Hold
Muting	 Mute / Dimmer	Display	 Display / Media
Mode-	 CH- / Page-	TV / SAT	 Shift + 1
Mode+	 CH+ / Page+	Repeat	 Green / APP / Repeat
Vol Rs-/Effect	 Play / Slow	TAPE	 Shift + 5
Tape 2 Pre./eq	 Pause / Step / Freeze	TV Prog+	 Shift + CH+ /
Sleep	 Sleep / Timer	Up / EQ+	 Up
Enter	 OK	Program	 TV/Radio /
Left	 Left	Dimmer	 Shift + Mute / Dimmer
MULTI CH / 2CH DIRECT	 Audio / Lang I/II	Down / EQ-	 Down
Source	 AV / Input / RDS	Test Tone	 Text / Goto
A.F.D.	 Sound / Title	Tuner	 Shift + 6
Volume+	 Vol+	TV Prog-	 Shift + CH- /
Main Menu	 Menu / Home	Pr 1	 1
Right	 Right	Pr 2	 2
Volume-	 Vol-	Pr 3	 3
EQ	 Subtitle / EQ	Pr 4	 4























 
 




Original	Recharge	Original	Recharge
Pr 6	 6	2CH / Off	 +  Shift + Audio / Lang I/II
Pr 5	 5		
Pr 7	 7		
Pr 8	 8		
Pr 9	 9		
D.Tuning	 Smart / List		
D.Skip/CH/Preset -	 I<< / Preset-		
D.Skip/CH/Preset	 >>I / Preset+		
MD/TAPE	 +  Shift + 7		
Power TV	 +  Shift + Power		
Phono	 +  Shift + 0		
DVD/LD	 +  Shift + 2		
CD/SACD	 +  Shift + 3		
Pr 0/10	 0		
VIDEO 1	 +  Shift + 4		
VIDEO 2	 +  Shift + 8		
VIDEO 3	 +  Shift + 9		



Original	Recharge	Original	Recharge
Mute	 Mute / Dimmer	ON/Off	 +  Shift + Power
Power ON/Off	 Power	Program	 TV/Radio /
Every Pop	 Picture / Format	CD Random	 Blue / Prime Video / Random
Sleep	 Sleep / Timer	Funct./Direct	 D.Menu / Top
Tape 1 Preset	 Down	Pr 1	 1
Vol Rs-/Effect	 CH- / Page-	Pr 2	 2
Repeat	 Green / APP / Repeat	Pr 3	 3
Tape 2 Pre./eq	 Subtitle / EQ	CD Play	 Play / Slow
Vol Rs+/S.Mode	 CH+ / Page+	Tape 1 Hall/Ats	 Up
Display	 Display / Media	Pr 4	 4
Stop	 Stop / Hold	Pr 5	 5
Woofer/Speed	 Menu / Home	Next/Prog+	 >> / Preset+
Tape 1 Stop	 OK	Pr 6	 6
Volume+	 Vol+	Pr 7	 7
Volume-	 Vol-	CD Rewind	 << / Tune-
CD/Theater	 Audio / Lang I/II	Pr 8	 8
Dimmer	 +  Shift + Mute / Dimmer	Pr 9	 9



Original	Recharge	Original	Recharge
Prev./Prog-	 << / Preset-	Tape 1 F.FWD	 Right
CD F.FWD	 >> / Tune+		
Pr 0/10	 0		
CD Pause	 Pause / Step / Freeze		
Phono/Scan	 Guide / EPG / -/--		
Mode	 Smart / List		
6 Ch/Geq	 +  6 Shift + 6		
Ubs/Check	 +  8 Shift + 8		
Tuner/Bypass	 Fav / Marker / PC		
Band	 +  9 Shift + 9		
Aux/Video	 +  7 Shift + 7		
Disc 1 Eject	 +  1 Shift + 1		
Disc 2	 +  2 Shift + 2		
Disc 3 Eject	 +  3 Shift + 3		
Disc 5	 +  5 Shift + 5		
Fm Mode/Disc	 Sound / Title		
Tape 1 Rew	 Left		

