



 
 

 
 
 



 


 

 


 
 
 




 
 
 
 











 


 
 

 

 





Original	Recharge
 Power	 Power
 Theatre	 Smart
 One-Touch Play	 Shift + Play
 Sleep	 Sleep
 S-Air Mode	 Red
 TV Input	 AV
 Picture Navi	 Media
 Dimmer	 Shift + Mute
 Display	 Info
 Function+	 Ch +
 Function-	 Ch -
 Audio	 Dual
 Subtitle /	 Subt
 Angle / Memory Select	 Format
 Sound Mode	 Shift + Dual
 Dynamic Bass	 Green
 Night	 Yellow

Original	Recharge
 System Menu	 Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Folder-	 Shift + Ch -
 Folder+	 Shift + Ch +
 DVD Menu	 D. Menu
 DVD Top Menu	 Shift + Menu
 Muting	 Mute






 


 
 
 
 
 







 
 
 






 










	Original	Rechange	Original	Rechange
	Volume+	 Vol +		Pause
	Volume-	 Vol -		Stop
	Up			
	Left			
	OK	 Ok		
	Right			
	Down			
	Return	 Back		
	Display / Tools	 Shift + Info		
	Display / Tools	 Options		
	I<< / Preset-	 I<<		
	>>I / Preset+	 >>I		
	◀• Replay / <II Step	 Shift + Left		
	•➔ Advance / Step II>	 Shift + Right		
	<< / Tuning- / <I Slow	 <<		
	>> / Tuning+ / Slow I>	 >>		
	Play	 Play		





Original	Recharge
 TV Power	 Power
 Menu	 Menu
 TV Enter	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Volume+	 Vol +
 Volume-	 Vol -
 Prog+	 Ch +

Original	Recharge
 Prog-	 Ch -

