


 
 

 
 
 

 
 
 



 



 


 
 


 

 

 

 

 

 

 
 

 










	Original	Rechange	Original	Rechange
	 Power	 Power	 Flash	 Format
	 Sleep	 Sleep	 Up	 Up
	 Disc Skip	 Smart	 Down	 Down
	 Play CD	 Play	 Right	 Right
	 Pause CD	 Pause	 Left	 Left
	 Stop CD	 Stop	 On/Off	 Ok
	 Play	 TV/R	 Vol+	 Vol +
	 <</ Tuner/Band	 <<	 Vol-	 Vol -
	 >> /+	 >>		
	 Play Deck A	 Red		
	 << Deck A	 <<		
	 >> Deck A	 >>		
	 Play Deck B	 Green		
	 Check	 Options		
	 Clear	 Exit		
	 Function	 Menu		
	 Loop	 AV		

