 



Original		Rechange		Original		Rechange	
	Open/Close		Eject / Surround		4		4
	Power		Power		5		5
	Stereo/Mono		Shift + Audio / Lang I/II		6		6
	Name		Text / Goto		Band		TV/Radio /
	Dimmer		Shift + Mute / Dimmer		Angle		Info / Angle
	Repeat		Green / APP / Repeat		7		7
	Tv/Video		AV / Input / RDS		8		8
	Clear		Exit / Cancel / Clear		9		9
	Memory		Rec / Rec Mode		Sound Field		Sound / Title
	Time		Sleep / Timer		Subtitle		Subtitle / EQ
	Muting		Mute / Dimmer	>10 button"/>	>10		Guide / EPG / -/-
	Play Mode		Shift + Play /		10/0		0
	1		1		Enter		Fav / Marker / PC
	2		2		Display		Display / Media
	3		3		Vol+		Vol+
	Function		Smart / List		Vol-		Vol-
	Audio		Audio / Lang I/II		I<</Preset-		I<< / Preset-

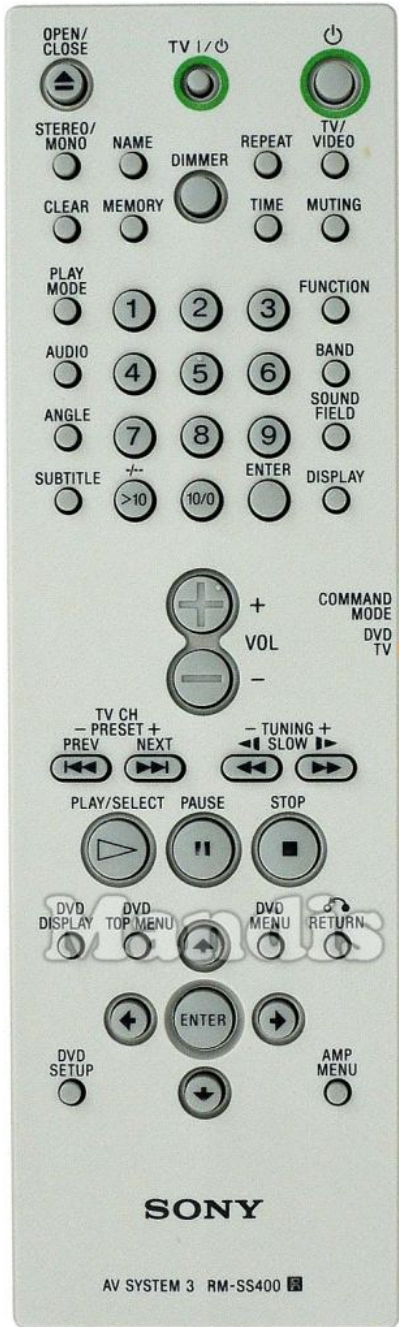



	Original	Recharge	Original	Recharge
	>> /Preset+	>> / Preset+		
	<</Tuning-/<	<< / Tune-		
	Tuning+ / Slow	>> / Tune+		
	Play/Select	Play / Slow		
	Pause	Pause / Step / Freeze		
	Stop	Stop / Hold		
	DVD Display	+ Shift + Display / Media		
	DVD Top Menu	+ Shift + D.Menu / Top Menu		
	Up	Up		
	DVD Menu	D.Menu / Top		
	Return	Back / Return		
	Left	Left		
	Enter	OK		
	Right	Right		
	DVD Setup	Setup / OPT /		
	Down	Down		
	AMP Menu	Menu / Home		



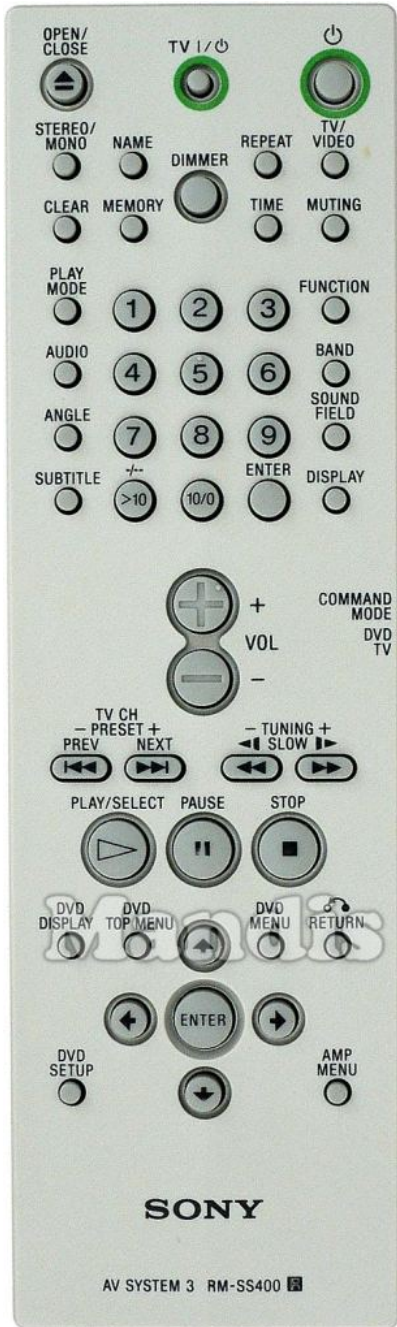 

Original	Rechange
Power Tv	Power
Stereo/Mono	Audio / Lang I/II
Tv/Video	AV / Input / RDS
Memory	Rec / Rec Mode
Muting	Mute / Dimmer
1	1
2	2
3	3
Function	Smart / List
4	4
5	5
6	6
Band	TV/Radio /
7	7
8	8
9	9
Sound Field	Sound / Title

Original	Rechange
>10	Guide / EPG / -/-
10/0	0
Display	Display / Media
Vol+	Vol+
Vol-	Vol-
Tv CH-	CH- / Page-
Tv CH+	CH+ / Page+
Enter	OK
AMP Menu	Menu / Home

