

 






 

 







 




 


 











	Original	Recharge	Original	Recharge
	Start/Stop			Slow l>
	Photo			x2
	Display			
	Zero			
	Data Code			
	T			
	W			
	Search Mode			
	I<<			
	>>I			
	<<			
	Play			
	>>			
	<  <			
	Stop			
	>  >			
	Pause			
				Format
				3D

