 



 




 
 

 

 
 





 
 
 


 


 
 


 








 


 

 

 




 

 

 

 


 

 
 
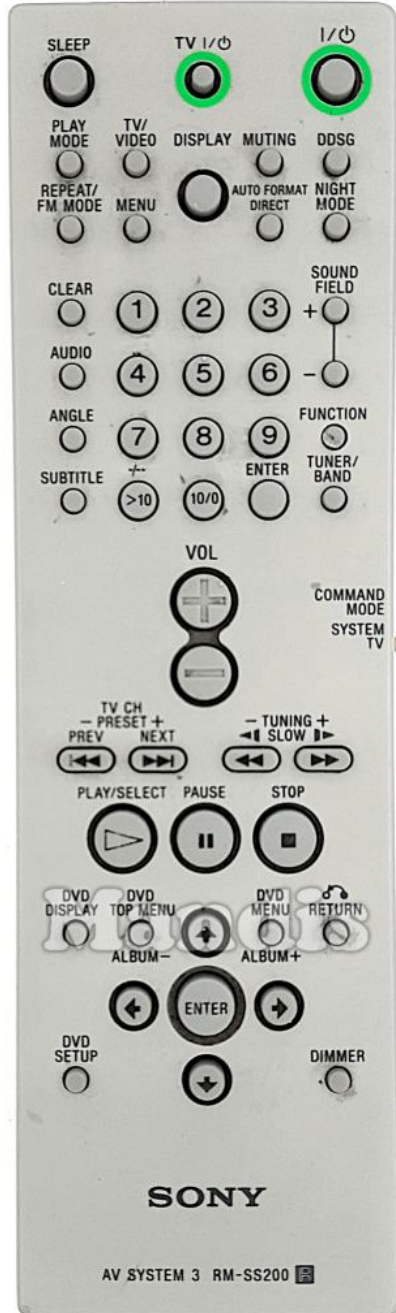


 
Original		Rechange		Original		Rechange	
	Power		Power		4		4
	Sleep		Sleep		5		5
	Play Mode		Shift + Play		6		6
	Tv/Video		TV/R		7		7
	Repeat Mode		Text		8		8
	Menu		Smart		9		9
	Display		Info		10/0		0
	Muting		Mute		>10 / -/--		Guide
	Auto Format		List		Enter		Pre Ch
	Night Mode		AV		Sound Field+		Ch +
	Clear		Exit		Sound Field-		Ch -
	Audio		Dual		Function		Media
	Angle		Red		Tuner Band		Format
	Subtitle		Subt		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		I<</Preset-		I<<
	3		3		>>I/Preset+		>>I

 





	Original	Recharge	Original	Recharge
	<</>I Slow/Tune-		<<	<<
	Tuning+/Slow		>>	>>
	Play		Play	Play
	Pause		Pause	Pause
	Stop		Stop	Stop
	DVD Display		Shift + Info	Shift + Info
	DVD Top		Menu	Menu
	DVD Menu /		D. Menu	D. Menu
	Return		Back	Back
	Up		Up	Up
	Left		Left	Left
	Enter		Ok	Ok
	Right		Right	Right
	Down		Down	Down
	DVD Setup		Options	Options
	Dimmer		Blue	Blue



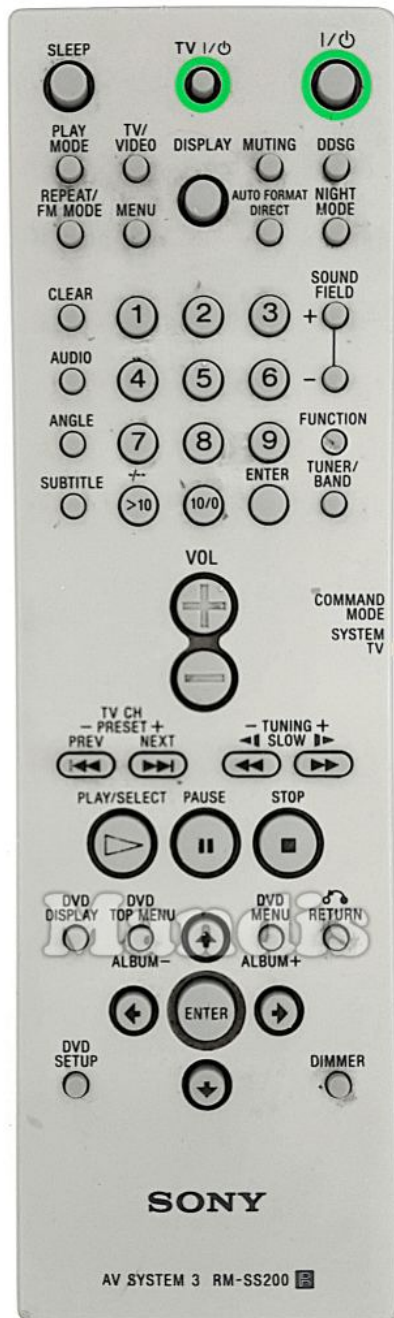

	Original	Rechange		Original	Rechange
	Power		Power		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	-/--		Guide		
	TV Vol+		Vol +		
	TV Vol-		Vol -		
	TV CH+		Ch +		
	TV CH-		Ch -		
	Tv/Video		TV/R		

	Original	Rechange		Original	Rechange

