





 

 

 

 

 

 

 

 

 

 









 

 



 



 



 

 

 

 

 

 

 

 

 

 





Original	Rechange
 Open/Close	 Eject / Surround
 Speakers Tv	 TV/Radio /
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Enter	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Rechange
 Blue	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 Pop Up Menu	 Smart / List
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Bluetooth	 Shift + 9
 Home/Menu	 Menu / Home
 Sen	 AV / Input / RDS
 Function	 Info / Angle
 Football	 Picture / Format
 Sound Mode	 Sound / Title
 Audio	 Audio / Lang I/II



 





 

 

 

 





 

 

 

 

 


 








 



 





 



 

 

 

 



 

 





Original	Rechange
Speakers TV Audio Bravia Sync	AV / Input / RDS
Power AV Bravia Sync	+ Shift + Power
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
[=]	Text / Goto
0	0
Enter	Fav / Marker / PC
Red	Red / Netflix / Search
Green	Green / APP / Repeat

Original	Rechange
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Top Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Return	Back / Return
Down	Down
Options	Setup / OPT /
Home/Menu	Menu / Home
Sound Mode	Sound / Title
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Display	Display / Media
<</Tuning-	<< / Tune-
Play	Play / Slow





Original	Recharge
 Speakers TV Audio Bravia Sync	 TV/Radio /
 Power AV Bravia Sync	 Shift + Power
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [=]	 Text / Goto
 0	 0
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Recharge
 Blue	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Home/Menu	 Menu / Home
 Subtitle	 Subtitle / EQ
 Display	 Display / Media
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Prog+	 CH+ / Page+
 Sleep	 Sleep / Timer
 Vol-	 Vol-
 Prog-	 CH- / Page-

