 







 





 

 

 











 












 

 

 


 



 














Original	Rechange
 Open / Close	 Eject / Surround
 Power	 Power
 TV Input	 AV / Input / RDS
 Sleep	 Sleep / Timer
 Display	 Shift + Display / Media
 Function+	 CH+ / Page+
 Video Format	 Shift + Picture / Format
 Movie / Music	 Sound / Title
 Dynamic Bass	 Shift + Sound / Title
 Function-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Rechange
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear
 0	 0
 Enter	 Fav / Marker / PC
 Picture Navi	 Picture / Format
 Audio	 Audio / Lang I/II
 Subtitle /	 Subtitle / EQ
 Angle	 Info / Angle
 DVD Top Menu	 D.Menu / Top
 Up	 Up
 DVD Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down





Original	Recharge	Original	Recharge
 System Menu	 Smart / List		
 [ - ]Display	 Display / Media		
 I<< / Preset-	 I<< / Preset-		
 Replay	 Shift + Left		
 Advance	 Shift + Right		
 >>I / Preset+	 >>I / Preset+		
 <I / << / Tuning-	 << / Tune-		
 Play	 Play / Slow		
 >> / I> / Tuning+	 >> / Tune+		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 Volume+	 Vol+		
 Sound Field+	 Shift + Vol+		
 Muting	 Mute / Dimmer		
 Volume-	 Vol-		
 Sound Field-	 Shift + Vol-		

