












 

 

 


























Original	Recharge	Original	Recharge
Theatre	 Fav / Marker / PC	Clear	 Exit / Cancel / Clear
One-Touch Play	 +  Shift + Play /	0	 0
Power	 Power	Time	 +  Shift + Sleep / Timer
Sleep	 Sleep / Timer	Audio	 Audio / Lang I/II
Night	 Text / Goto	Subtitles / D.Tuning	 Subtitle / EQ
Dynamic Bass	 Eject / Surround	Angle	 +  Shift + Info / Angle
TV	 +  Shift + 1	System Menu	 +  Shift + Menu /
TV	 TV/Radio /	Red	 Red / Netflix / Search
1	 1	Green	 Green / APP / Repeat
2	 2	Yellow	 Yellow / YouTube / Repeat
3	 3	Blue	 Blue / Prime Video / Random
4	 4	Top Menu	 D.Menu / Top
5	 5	Display	 Display / Media
6	 6	Pop Up / Menu	 Menu / Home
7	 7	Up	 Up
8	 8	Left	 Left
9	 9	Enter	 OK



Original	Recharge	Original	Recharge
Right		Right	
Return		Back / Return	
Down		Down	
Options		Setup / OPT /	
Home		Smart / List	
Function		AV / Input / RDS	
Sound Mode		Sound / Title	
I<< / Preset-		I<< / Preset-	
<- Replay		CH- / Page-	
-> Advance		CH+ / Page+	
>>I / Preset+		>>I / Preset+	
<< / Tuning-		<< / Tune-	
Play		Play / Slow	
>> / Tuning+		>> / Tune+	
Scene Search	 + 	Shift + Red / Netflix /	
Pause		Pause / Step / Freeze	
Stop		Stop / Hold	





Original	Rechange	Original	Rechange
Power	Power	Tools	Setup / OPT /
1	1	Muting	Mute / Dimmer
2	2	Volume+	Vol+
3	3	Prog+	CH+ / Page+
4	4	Source	AV / Input / RDS
5	5	Volume-	Vol-
6	6	Prog-	CH- / Page-
7	7	[i+]	Info / Angle
8	8		
9	9		
Text	Text / Goto		
0	0		
-/--	Shift + Guide / EPG / -/--		
Digital	Smart / List		
Analog	Display / Media		
Guide	Guide / EPG / -/--		
Home / Menu	Menu / Home		

Original	Rechange	Original	Rechange
Power	Power	Tools	Setup / OPT /
1	1	Muting	Mute / Dimmer
2	2	Volume+	Vol+
3	3	Prog+	CH+ / Page+
4	4	Source	AV / Input / RDS
5	5	Volume-	Vol-
6	6	Prog-	CH- / Page-
7	7	[i+]	Info / Angle
8	8		
9	9		
Text	Text / Goto		
0	0		
-/--	Shift + Guide / EPG / -/--		
Digital	Smart / List		
Analog	Display / Media		
Guide	Guide / EPG / -/--		
Home / Menu	Menu / Home		

