 

 

 

 





 

 













 





 

 







Original	Recharge	Original	Recharge
 Eject	 Eject / Surround	 Stop CD	 Shift + Stop /
 Display	 Display / Media	 Start CD Synchro	 Shift + Play /
 Counter Reset	 Exit / Cancel / Clear	 Standby CD	 Power
 Counter	 Menu / Home		
 Monitor	 Smart / List		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 Rec	 Rec / Rec Mode		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Rec Stop	 Sound / Title		
 Stop	 Stop / Hold		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 CD Pause	 OK		
 CD I<<	 Left		
 CD >>I	 Right		



<https://telecommandes-mandis.be/fr/Sony/1066124-82271-telecommande-de-remplacement-pour-Sony-RM-J701-146531411.html>