







 



 



 



 







 



 



 



 























 







| Original | | Rechange | | Original | | Rechange | |
|---|-----------|---|------------------|---|----------|---|-----------------------|
|  | Power |  | Power |  | Vol + |  | Vol+ |
|  | Mute |  | Mute / Dimmer |  | MTS |  | Audio / Lang I/II |
|  | 1 |  | 1 |  | CH + |  | CH+ / Page+ |
|  | 2 |  | 2 |  | Vol - |  | Vol- |
|  | 3 |  | 3 |  | REC List |  | Smart / List |
|  | 4 |  | 4 |  | CH - |  | CH- / Page- |
|  | 5 |  | 5 |  | FAV List |  | Fav / Marker / PC |
|  | 6 |  | 6 |  | REC |  | Rec / Rec Mode |
|  | 7 |  | 7 |  | Freeze |  | Pause / Step / Freeze |
|  | 8 |  | 8 |  | Menu |  | Menu / Home |
|  | 9 |  | 9 |  | Up |  | Up |
|  | DTV / ATV |  | D.Menu / Top |  | Source |  | AV / Input / RDS |
|  | 0 |  | 0 |  | Left |  | Left |
|  | Recall |  | Back / Return |  | Enter |  | OK |
|  | P.Mode |  | Picture / Format |  | Right |  | Right |
|  | S.Mode |  | Sound / Title |  | Exit |  | Exit / Cancel / Clear |
|  | Sleep |  | Sleep / Timer |  | Down |  | Down |





| Original | Recharge |
|------------------------|-----------------------------|
| Display | Display / Media |
| Red | Red / Netflix / Search |
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Blue | Blue / Prime Video / Random |
| << / Guide | << / Tune- |
| << / Guide | Guide / EPG / -/-- |
| Play/Pause / Timeshift | Play / Slow |
| >> / Aspect | >> / Tune+ |
| << / Cancel | << / Preset- |
| >> / Subpage | >> / Preset+ |
| Stop / Index | Info / Angle |
| Stop / Index | Stop / Hold |
| TV / Radio | TV/Radio / |
| Subtitle | Subtitle / EQ |
| Reveal | Setup / OPT / |
| Size | Zoom / Size |

| Original | Recharge |
|----------|-------------------|
| Hold | + Shift + Stop / |
| Text | Text / Goto |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

