



 







 















 



 
 



 

 





Original	Rechange
Standby	Power
Open/Close	Eject / Surround
OSD	Display / Media
1	1
2	2
3	3
Prog	TV/Radio /
4	4
5	5
6	6
A-B	Yellow / YouTube / Repeat
7	7
8	8
9	9
Repeat	Green / APP / Repeat
Goto	Text / Goto
0/10	0

Original	Rechange
10+	Guide / EPG / -/-
L/R/ST/Mo	Sound / Title
P/N	Blue / Prime Video / Random
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Stop/Mem	Stop / Hold
I<</Station-	I<< / Preset-
>>I/Station+	>>I / Preset+
Play/Pause/FM/AM	Play / Slow
Slow	Shift + Play /
<</Search-	<< / Tune-
>>/Search+	>> / Tune+
Step	Pause / Step / Freeze
Menu	Menu / Home
Return	Back / Return
Angle	Info / Angle
Up	Up





Original	Recharge	Original	Recharge
 Setup	 Setup / OPT /	 Source	 AV / Input / RDS
 Left	 Left	 Treb-	 CH- / Page-
 Enter	 OK	 Bass-	 Shift + CH- /
 Right	 Right	 Vol-	 Vol-
 Clock/Tv-Mode	 Sleep / Timer		
 Down	 Down		
 Title	 Shift + Sound / Title		
 Preview	 Fav / Marker / PC		
 Zoom	 Zoom / Size		
 DVD/USB/Card	 D.Menu / Top		
 PBC	 Smart / List		
 VFD	 Picture / Format		
 EQ	 Shift + Subtitle / EQ		
 Mute	 Mute / Dimmer		
 Treb+	 CH+ / Page+		
 Bass+	 Shift + CH+ /		
 Vol+	 Vol+		

