


 





 








| Original | | Rechange | | Original | | Rechange | |
|---|------------|---|----------------------------|---|--------|---|---------------------------|
|  | Power |  | Power |  | 8 |  | 8 |
|  | Language |  | Audio / Lang I/II |  | 9 |  | 9 |
|  | Menu |  | Menu / Home |  | Clear |  | Exit / Cancel / Clear |
|  | Open/Close |  | Eject / Surround |  | 10/0 |  | 0 |
|  | Goto |  | Text / Goto |  | 10+ |  | Guide / EPG / -/- |
|  | Angle |  | Info / Angle |  | Step |  | Shift + Pause / Step / |
|  | Prog |  | Shift + TV/Radio / Program |  | V-Mode |  | Picture / Format |
|  | PBC |  | Smart / List |  | USB |  | Shift + 8 |
|  | 1 |  | 1 |  | Repeat |  | Green / APP / Repeat |
|  | 2 |  | 2 |  | A-B |  | Yellow / YouTube / Repeat |
|  | 3 |  | 3 |  | Title |  | Sound / Title |
|  | N/P |  | TV/Radio / |  | Return |  | Back / Return |
|  | 4 |  | 4 |  | OSD |  | Display / Media |
|  | 5 |  | 5 |  | Slow |  | Shift + Play / |
|  | 6 |  | 6 |  | Zoom |  | Zoom / Size |
|  | R/L |  | Sleep / Timer |  | Setup |  | Setup / OPT / |
|  | 7 |  | 7 |  | Up |  | Up |





| | Original | Rechange | Original | Rechange |
|---|----------|---|----------|----------|
|  | Subt |  Subtitle / EQ | | |
|  | Left |  Left | | |
|  | Enter |  OK | | |
|  | Right |  Right | | |
|  | Pause |  Pause / Step / Freeze | | |
|  | Down |  Down | | |
|  | Mute |  Mute / Dimmer | | |
|  | Stop |  Stop / Hold | | |
|  | << |  << / Tune- | | |
|  | >> |  >> / Tune+ | | |
|  | Vol+ |  Vol+ | | |
|  | Play |  Play / Slow | | |
|  | I<< |  I<< / Preset- | | |
|  | >>I |  >>I / Preset+ | | |
|  | Vol- |  Vol- | | |
| | | | | |
| | | | | |

