



 



 







 



 







 



 

 

 



 



 







 



 










 



















Original		Rechange		Original		Rechange	
	Power		Power		0		0
	Audio		Audio / Lang I/II		Last		Back / Return
	Mute		Mute / Dimmer		Menu		Menu / Home
	Tv/R		TV/Radio /		Exit		Exit / Cancel / Clear
	Sub-T		Subtitle / EQ		Up		Up
	EPG		Guide / EPG / -/--		CH+		CH+ / Page+
	Text		Text / Goto		Vol-		Vol-
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Vol+		Vol+
	5		5		Info		Info / Angle
	6		6		CH-		CH- / Page-
	7		7		Down		Down
	8		8		Mode		Smart / List
	9		9		PVR		Display / Media
	Favor		Fav / Marker / PC		USB		Shift + 8





Original		Rechange		Original		Rechange	
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Red		Red / Netflix / Search				
	I<<		I<< / Preset-				
	Yellow		Yellow / YouTube / Repeat				
	>>I		>>I / Preset+				
	Stop		Stop / Hold				
	Green		Green / APP / Repeat				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Blue		Blue / Prime Video / Random				
	Rec		Rec / Rec Mode				

