
 




 

 





 

 
 




Original	Rechange	Original	Rechange
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up / CH + / I<<	 Up
 3	 3	 Down / CH - / >>I	 Down
 4	 4	 Right / Vol +	 Right
 5	 5	 Left / Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 Up / CH + / I<<	 I<<
 8	 8	 Down / CH - / >>I	 >>I
 9	 9	 Up / CH + / I<<	 Ch +
 0	 0	 Down / CH - / >>I	 Ch -
 FAV	 Shift + Pre Ch	 Left / Vol -	 Vol -
 Recall	 Pre Ch	 Right / Vol +	 Vol +
 Game	 Media	 Red / Zoom	 Red
 Auto	 Smart	 Green / Lan/Audio	 Green
 Info	 Info	 Yellow /	 Yellow

Original	Rechange	Original	Rechange
 MUTE	 MUTE	 TV	 AUX
 MUTE	 MUTE	 DVD	 REC MODE
 1	 1	 SAT	 PLAY MODE
 2	 2	 AUX	 II
 3	 3	 SOUND	 ■
 4	 4	 AD	 ●
 5	 5	 SETTINGS	 <<<
 6	 6	 LIST	 <<
 7	 7	 DUAL	 >>
 8	 8	 SUBT	 <<<
 9	 9	 OPT	 <<
 0	 0	 ECO	 SEARCH
 FAV	 Shift + Pre Ch	 PICTURE	 TV/R
 Recall	 Pre Ch	 3D	 FORMAT
 Game	 Media	 TIMER	 E-MANUAL
 Auto	 Smart	 D.MENU	 REPEAT
 Info	 Info	 TEXT	 ZOOM
		 AV	 ▲
			 TOP MENU
			 INFO
			 OK
			 CLEAR
			 EXIT
			 RETURN
			 BACK
			 HOME
			 SMART
			 APP
			 MEDIA
			 + VOL
			 CH -
			 1
			 2
			 3
			 4
			 5
			 6
			 7
			 8
			 9
			 +/-
			 GUIDE
			 0
			 FAV
			 PRE-CH
			 A
			 B
			 C
			 D
			 Mandis SHOP
			 www.mandis.tv



Play/Pause

