










 
 


 


 








 



| Original | Rechange |
|--|---|
|  Power |  Power |
|  Open / Close |  Eject / Surround |
|  OSD |  Display / Media |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Subtitle |  Subtitle / EQ |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Angle |  Info / Angle |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Language |  Audio / Lang I/II |
|  R/L |  Blue / Prime Video / Random |
|  0 |  0 |

| Original | Rechange |
|--|---|
|  10+ |  Guide / EPG / -/-- |
|  Setup |  Setup / OPT / |
|  Mute |  Mute / Dimmer |
|  Clear |  Exit / Cancel / Clear |
|  Prog |  TV/Radio / |
|  Time |  Sleep / Timer |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  Title |  Sound / Title |
|  Menu |  Menu / Home |
|  Default |  AV / Input / RDS |
|  << |  << / Tune- |
|  Play / Pause |  Play / Slow |
|  Play / Pause |  Pause / Step / Freeze |



























































 










| Original | Rechange |
|---|---|
|  |  I<< / Preset- |
|  |  >> / Tune+ |
|  |  Stop / Hold |
|  |  >> / Preset+ |
|  |  Red / Netflix / Search |
|  |  Green / APP / Repeat |
|  |  Yellow / YouTube / Repeat |
|  |  Zoom / Size |
|  |  D.Menu / Top |
|  |  Shift + Pause / Step / |
|  |  Shift + Play / |
|  |  Vol+ |
|  |  Smart / List |
|  |  Picture / Format |
|  |  Back / Return |
|  |  Vol- |

| Original | Rechange |
|----------|----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Original | Rechange | Original | Rechange |
|------------|---|------------|---|
| On/Off |  Power | Progr. |  TV/Radio / |
| Audio Off |  Mute / Dimmer | Top Menu |  D.Menu / Top |
| Play |  Play / Slow | Setup |  Setup / OPT / |
| Pause |  Pause / Step / Freeze | C/CH |  Text / Goto |
| Stop |  Stop / Hold | DVD/TV |  AV / Input / RDS |
| Record |  Rec / Rec Mode | Menu |  Menu / Home |
| Rewind |  << / Tune- | Menu Up |  Up |
| F.Forward |  >> / Tune+ | Angle |  Info / Angle |
| Prev. |  I<< / Preset- | Menu Left |  Left |
| Next |  >>I / Preset+ | OK Enter |  OK |
| Title |  Sound / Title | Menu Right |  Right |
| Audio |  Audio / Lang I/II | Pbc |  Exit / Cancel / Clear |
| Subt. |  Subtitle / EQ | Menu Down |  Down |
| Open/Close |  Eject / Surround | Return |  Back / Return |
| Auto/Track |  Picture / Format | Volume+ |  Vol+ |
| Zoom |  Zoom / Size | Resume |  Smart / List |
| Np |  Sleep / Timer | Slow Up |  CH+ / Page+ |

| Original | Rechange | Original | Rechange |
|------------|---|------------|---|
| On/Off |  Power | Progr. |  TV/Radio / |
| Audio Off |  Mute / Dimmer | Top Menu |  D.Menu / Top |
| Play |  Play / Slow | Setup |  Setup / OPT / |
| Pause |  Pause / Step / Freeze | C/CH |  Text / Goto |
| Stop |  Stop / Hold | DVD/TV |  AV / Input / RDS |
| Record |  Rec / Rec Mode | Menu |  Menu / Home |
| Rewind |  << / Tune- | Menu Up |  Up |
| F.Forward |  >> / Tune+ | Angle |  Info / Angle |
| Prev. |  I<< / Preset- | Menu Left |  Left |
| Next |  >>I / Preset+ | OK Enter |  OK |
| Title |  Sound / Title | Menu Right |  Right |
| Audio |  Audio / Lang I/II | Pbc |  Exit / Cancel / Clear |
| Subt. |  Subtitle / EQ | Menu Down |  Down |
| Open/Close |  Eject / Surround | Return |  Back / Return |
| Auto/Track |  Picture / Format | Volume+ |  Vol+ |
| Zoom |  Zoom / Size | Resume |  Smart / List |
| Np |  Sleep / Timer | Slow Up |  CH+ / Page+ |






















| Original | Recharge | Original | Recharge |
|--------------|------------------------|----------|----------|
| Volume- | Vol- | | |
| Display | Display / Media | | |
| Slow Down | CH- / Page- | | |
| 1 | 1 | | |
| 2 | 2 | | |
| 3 | 3 | | |
| 4 | 4 | | |
| 5 | 5 | | |
| 6 | 6 | | |
| 7 | 7 | | |
| 8 | 8 | | |
| 9 | 9 | | |
| +10 | Guide / EPG / -/-- | | |
| 0 | 0 | | |
| R/L | Fav / Marker / PC | | |
| Search | Red / Netflix / Search | | |
| Repeat/1/All | Green / APP / Repeat | | |

| Original | Recharge | Original | Recharge |
|--------------|-----------------------------|----------|----------|
| Rep/A-B | Yellow / YouTube / Repeat | | |
| Shuffle | Blue / Prime Video / Random | | |
| Karaoke/Step | Shift + Pause / Step / | | |
| Echo+ | Shift + Up | | |
| Echo- | Shift + Down | | |
| 3D | Shift + 3 | | |
| Video | Shift + 4 | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |



















 




| Original | Rechange |
|------------|---|
| On/Off |  Power |
| Audio Off |  Mute / Dimmer |
| Play |  Play / Slow |
| Pause |  Pause / Step / Freeze |
| Stop |  Stop / Hold |
| Record |  Rec / Rec Mode |
| Rewind |  << / Tune- |
| F.Forward |  >> / Tune+ |
| Prev. |  I<< / Preset- |
| Next |  >>I / Preset+ |
| Title |  Sound / Title |
| Lang |  Audio / Lang I/II |
| Subt. |  Subtitle / EQ |
| Open/Close |  Eject / Surround |
| Auto/Track |  Picture / Format |
| Zoom |  Zoom / Size |
| Pbc |  Sleep / Timer |

| Original | Rechange |
|-------------|---|
| Progr. |  TV/Radio / |
| Top Menu |  D.Menu / Top |
| Setup |  Setup / OPT / |
| Resume |  Text / Goto |
| DVD/TV |  AV / Input / RDS |
| Menu |  Menu / Home |
| Menu Up |  Up |
| Angle |  Info / Angle |
| Menu Left |  Left |
| OK Enter |  OK |
| Menu Right |  Right |
| Clear/00:00 |  Exit / Cancel / Clear |
| Menu Down |  Down |
| Return |  Back / Return |
| Volume+ |  Vol+ |
| Mode |  Smart / List |
| Slow Up |  CH+ / Page+ |





| Original | Recharge | |
|--------------|---|------------------------|
| Volume- |  | Vol- |
| Display |  | Display / Media |
| Slow Down |  | CH- / Page- |
| 1 |  | 1 |
| 2 |  | 2 |
| 3 |  | 3 |
| 4 |  | 4 |
| 5 |  | 5 |
| 6 |  | 6 |
| 7 |  | 7 |
| 8 |  | 8 |
| 9 |  | 9 |
| +10 |  | Guide / EPG / -/-- |
| 0 |  | 0 |
| C/CH |  | Fav / Marker / PC |
| Np |  | Red / Netflix / Search |
| Repeat/1/All |  | Green / APP / Repeat |

| Original | Recharge | |
|----------|---|-----------------------------|
| Rep/A-B |  | Yellow / YouTube / Repeat |
| R/L |  | Blue / Prime Video / Random |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

