



Original		Rechange		Original		Rechange	
	Power		Power		Display		Info
	Mute		Mute		Sleep		Sleep
	1		1		Vol+		Vol +
	2		2		Vol-		Vol -
	3		3		CH+		Ch +
	4		4		CH-		Ch -
	5		5		FAV/List		Shift + Pre Ch
	6		6		Clock		Shift + AV
	7		7		List		List
	8		8		Tv/Radio		TV/R
	9		9		Aspect		Format
	0		0		Freeze		Pause
	-/--		Guide		Index		Options
	Recall		Pre Ch		Cancel		Back
	Menu		Menu		Subpage		Subt
	Source		AV		Text		Text
	Exit		Exit		Size		Eject





	Original	Rechange	Original	Rechange
	REVEAL	MEDIA		
	HOLD	DUAL		
	MIX	SHIFT + MEDIA		
	RED	A		
	GREEN	B		
	YELLOW	C		
	CYAN	D		
	NICAM	SMART		
	P.MODE	SHIFT + FORMAT		
	S.MODE	SHIFT + DUAL		
	OK	OK		
	Up	Up		
	Down	Down		
	Right	Right		
	Left	Left		

