


 



 
 



Original	Rechange
 TV	 TV/R
 CD	 Yellow
 DVD	 Blue
 Tuner/Band	 Green
 Tape	 Red
 VCR	 Smart
 Vol+	 Vol +
 Vol-	 Vol -
 Muting	 Mute
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Select	 Ok
 Menu	 D. Menu
 Display	 Info
 Disc/Deck 1/2	 Menu

Original	Rechange
 Tv/AV	 AV
 Pro Logic	 Media
 Center-	 Shift + Ch -
 Center+	 Shift + Ch +
 Test	 Back
 Surround +	 Ch +
 Surround -	 Ch -
 Power TV	 Power
 Tv Vol Up	 Shift + Vol +
 Tv Vol Down	 Shift + Vol -
 1 Tv	 1
 2 Tv	 2
 3 Tv	 3
 4 Tv	 4
 5 Tv	 5
 6 Tv	 6
 7 Tv	 7




 

 



 

 

 





 

 





 




 



 



 



 



 

 

 


 


 



 




	Original	Recharge		Original	Recharge
	 8 Tv	 8			
	 9 Tv	 9			
	 0 Tv	 0			
	 >10 / -/- Tv	 GUIDE			





Original		Recharge		Original		Recharge	
	Power DVD		Power		Left		Left
	TV		TV/R		Select		Ok
	VCR		Smart		Test		Back
	Tuner/Band		Green		Pro Logic		Media
	Tape		Red		Center-		Shift + Ch -
	CD		Yellow		Center+		Shift + Ch +
	DVD		Blue		Surround +		Ch +
	Play DVD		Play		Surround -		Ch -
	I<</<< DVD		<<		1 DVD		1
	Stop DVD		Stop		2 DVD		2
	>>/>>I DVD		>>		3 DVD		3
	Disc/Deck 1/2		Menu		4 DVD		4
	Display		Info		5 DVD		5
	Menu		D. Menu		6 DVD		6
	Up		Up		7 DVD		7
	Down		Down		8 DVD		8
	Right		Right		9 DVD		9





Original	Rechange	Original	Rechange
 0 DVD	 0		
 >10 / - / - DVD	 Guide		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Muting	 Mute		





Original	Rechange	Original	Rechange
 Power CD	 Power	 Left	 Left
 TV	 TV/R	 Select	 Ok
 VCR	 Smart	 Test	 Back
 CD	 Yellow	 Pro Logic	 Media
 DVD	 Blue	 Center-	 Shift + Ch -
 Tape	 Red	 Center+	 Shift + Ch +
 Tuner/Band	 Green	 Surround +	 Ch +
 Stop CD	 Stop	 Surround -	 Ch -
 I<</<< CD	 <<	 Vol+	 Vol +
 >>/>>I CD	 >>	 Vol-	 Vol -
 Play CD	 Play	 Muting	 Mute
 Menu	 D. Menu	 Power Tape	 Shift + Power
 Display	 Info	 Stop Tape	 Shift + Stop
 Disc/Deck 1/2	 Menu	 Play Tape	 Shift + Play
 Up	 Up	 I<</<< Tape	 Shift + <<
 Down	 Down	 >>/>>I Tape	 Shift + >>
 Right	 Right	 Disc/Deck 1/2	 Shift + Menu



Tape

 











 
 




 
 
 
 

 


 
 


 
 


 

 

 


 

 

 

 
 
 



 
 
 


 








 


	Original	Rechange		
	1 CD-Tape		1	
	2 CD-Tape		2	
	3 CD-Tape		3	
	4 CD-Tape		4	
	5 CD-Tape		5	
	6 CD-Tape		6	
	7 CD-Tape		7	
	8 CD-Tape		8	
	9 CD-Tape		9	
	0 CD-Tape		0	
	>10/-/- CD-Tape		GUIDE	Guide
	Direct Tuning/Disc Enter		REPEAT TEXT	Text

	Original	Rechange







Original	Rechange	Original	Rechange
 Power VCR	 Power	 7 VCR	 7
 VCR	 Smart	 8 VCR	 8
 Tape	 Red	 9 VCR	 9
 TV	 TV/R	 0 VCR	 0
 CD	 Yellow	 >10/-/- VCR	 Guide
 DVD	 Blue	 Direct Tuning/Disc Enter	 Text
 Tuner/Band	 Green	 Vol+	 Vol +
 Stop	 Stop	 Vol-	 Vol -
 I<</<<	 <<	 Muting	 Mute
 >>/>>I	 >>	 Up	 Up
 Play	 Play	 Down	 Down
 1 VCR	 1	 Right	 Right
 2 VCR	 2	 Left	 Left
 3 VCR	 3	 Select	 Ok
 4 VCR	 4	 Disc/Deck 1/2	 Menu
 5 VCR	 5	 Display	 Info
 6 VCR	 6	 Menu	 D. Menu





Original	Rechange
 Test	 Back
 Pro Logic	 Media
 Center-	 Shift + Ch -
 Center+	 Shift + Ch +
 Surround +	 Ch +
 Surround -	 Ch -
 Power Tuner/Band	 Shift + Power
 1 Tuner/Band	 Shift + 1
 2 Tuner/Band	 Shift + 2
 3 Tuner/Band	 Shift + 3
 4 Tuner/Band	 Shift + 4
 5 Tuner/Band	 Shift + 5
 6 Tuner/Band	 Shift + 6
 7 Tuner/Band	 Shift + 7
 8 Tuner/Band	 Shift + 8
 9 Tuner/Band	 Shift + 9
 0 Tuner/Band	 Shift + 0

Original	Rechange
 >10/-/	 Shift + Guide

