 


 

 







 










 






 



 







 







 



 

 

 

 









 


 



 




 

 

 


 
 

 












Original	Rechange	Original	Rechange
 Power TV	 Power	 Test	 Text
 Home Theater	 Media	 Delay	 Format
 Home Theater	 Smart	 Level	 3D
 Tape	 Red	 -	 Ch -
 CD	 Yellow	 +	 Ch +
 Tuner/Band	 Green	 1 Tv	 1
 DVD	 Blue	 2 Tv	 2
 Up	 Up	 3 Tv	 3
 Left	 Left	 4 Tv	 4
 Select	 Ok	 5 Tv	 5
 Right	 Right	 6 Tv	 6
 Down	 Down	 7 Tv	 7
 Display	 Info	 8 Tv	 8
 Menu	 Menu	 9 Tv	 9
 Stereo	 Dual	 0 Tv	 0
 Surround	 Subt	 >10 Tv	 Guide
 SFC	 Options	 CH-	 Shift + Ch -

 



 



 



 







 



 
 


 
 


 




 









 
















 












Original	Rechange	Original	Rechange
 Power DVD	 Power	 Menu	 Menu
 Home Theater	 Media	 Stereo	 Dual
 Home Theater	 Smart	 Surround	 Subt
 Tape	 Red	 SFC	 Options
 CD	 Yellow	 Test	 Text
 Tuner/Band	 Green	 Delay	 Format
 DVD	 Blue	 Level	 3D
 Play DVD	 Play	 -	 Ch -
 I<</<< DVD	 <<	 +	 Ch +
 Stop DVD	 Stop	 1 DVD	 1
 >>/>>I DVD	 >>	 2 DVD	 2
 Up	 Up	 3 DVD	 3
 Left	 Left	 4 DVD	 4
 Select	 Ok	 5 DVD	 5
 Right	 Right	 6 DVD	 6
 Down	 Down	 7 DVD	 7
 Display	 Info	 8 DVD	 8





Original	Recharge	Original	Recharge
 Power CD	 Power	 Left	 Left
 Power Tape	 +  Shift + Power	 Select	 Ok
 Home Theater	 Media	 Right	 Right
 Home Theater	 Smart	 Down	 Down
 Tape	 Red	 Display	 Info
 CD	 Yellow	 Menu	 Menu
 Tuner/Band	 Green	 Stereo	 Dual
 DVD	 Blue	 Surround	 Subt
 Play Tape	 +  Shift + Play	 SFC	 Options
 Play CD	 Play	 Test	 Text
 I<</<< Tape	 +  Shift + <<	 Delay	 Format
 I<</<< CD	 <<	 Level	 3D
 Stop Tape	 +  Shift + Stop	 -	 Ch -
 Stop CD	 Stop	 +	 Ch +
 >>/>>I Tape	 +  Shift + >>	 Direct Tuning/Disc Enter	 D. Menu
 >>/>>I CD	 >>	 1 CD-Tape	 1
 Up	 Up	 2 CD-Tape	 2





Original	Recharge	Original	Recharge
 Power VCR	 Power	 Display	 Info
 Power Tuner/Band	 Shift + Power	 Menu	 Menu
 Home Theater	 Media	 Stereo	 Dual
 Home Theater	 Smart	 Surround	 Subt
 Tape	 Red	 SFC	 Options
 CD	 Yellow	 Test	 Text
 Tuner/Band	 Green	 Delay	 Format
 DVD	 Blue	 Level	 3D
 Play	 Play	 -	 Ch -
 I<</<<	 <<	 +	 Ch +
 Stop	 Stop	 Direct Tuning/Disc Enter	 D. Menu
 >>/>>I	 >>	 1 VCR	 1
 Up	 Up	 1 Tuner/Band	 Shift + 1
 Left	 Left	 2 VCR	 2
 Select	 Ok	 >10 VCR	 Guide
 Right	 Right	 2 Tuner/Band	 Shift + 2
 Down	 Down	 3 VCR	 3





Original	Rechange
3 Tuner/Band	+ Shift + 3
4 VCR	4
4 Tuner/Band	+ Shift + 4
5 VCR	5
5 Tuner/Band	+ Shift + 5
6 VCR	6
6 Tuner/Band	+ Shift + 6
7 VCR	7
7 Tuner/Band	+ Shift + 7
8 VCR	8
8 Tuner/Band	+ Shift + 8
9 VCR	9
9 Tuner/Band	+ Shift + 9
0 VCR	0
0 Tuner/Band	+ Shift + 0
CH-	+ Shift + Ch -
CH+	+ Shift + Ch +

Original	Rechange
Disc/Deck 1/2	LIST
Muting	Mute
Vol-	Vol -
Vol+	Vol +
>10 button"/> >10	+ Shift + Guide

