




 













 







 






 




 





Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 Red / <<<	 Red / Netflix / Search
 Red / <<<	 <<< / Tune-
 Green / Stop	 Green / APP / Repeat
 Green / Stop	 Stop / Hold

Original	Rechange
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+
 Prog -	 CH- / Page-






Original	Recharge	Original	Recharge
 Menu	 Menu / Home		
 Vol -	 Vol-		
 TV/SAT	 Smart / List		
 TXT	 Text / Goto		
 Stop	 Pause / Step / Freeze		
 EXT	 Display / Media		
 SAT1 + OK	 Shift + 2		
 SAT2 + OK	 Shift + 3		
 TV + OK	 Shift + 1		
 PIP	 Picture / Format		

Original	Recharge






Original	Recharge
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 A/B	 Shift + Yellow / YouTube /
 Red / <<<	 <<< / Tune-
 Red / <<<	 Red / Netflix / Search
 Green / Stop	 Green / APP / Repeat

Original	Recharge
 Green / Stop	 Stop / Hold
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Exit / Cancel / Clear
 Exit / Recall	 Back / Return
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+





Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 A/B	 Shift + Yellow / YouTube /
 Red / <<	 Red / Netflix / Search
 Red / <<	 << / Tune-
 Green / Stop	 Stop / Hold

Original	Rechange
 Green / Stop	 Green / APP / Repeat
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>	 >> / Tune+
 Blue / >>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+





Original		Recharge		Original	Recharge
	Prog -		CH- / Page-		
	Menu		Menu / Home		
	Vol -		Vol-		
	TV/SAT		Smart / List		
	TXT		Text / Goto		
	Stop		Pause / Step / Freeze		
	EXT		Display / Media		
	SAT1 + OK	+ 2	Shift + 2		
	SAT2 + OK	+ 3	Shift + 3		
	TV + OK	+ 1	Shift + 1		

