 



 



 

 

 

 

 

 

 

 

 

 

 

 



 

 

 






 






 



 

 



 









| Original | Rechange | Original | Rechange |
|---|------------|---|------------------------|
|  | Power |  | Power |
|  | TV/Rad |  | TV/Radio / |
|  | Mute |  | Mute / Dimmer |
|  | TV/SAT |  | AV / Input / RDS |
|  | Edit |  | Sound / Title |
|  | Sleep |  | Sleep / Timer |
|  | Mosaic |  | D.Menu / Top |
|  | Freeze |  | Shift + Pause / Step / |
|  | Zoom |  | Zoom / Size |
|  | EPG |  | Guide / EPG / -/- |
|  | Subtitle |  | Subtitle / EQ |
|  | FAV |  | Fav / Marker / PC |
|  | Audio |  | Audio / Lang / I/II |
|  | A-Z |  | Eject / Surround |
|  | USB |  | Shift + 8 |
|  | Text |  | Text / Goto |
|  | Info |  | Info / Angle |
|  | Menu |  | Menu / Home |
|  | Exit |  | Exit / Cancel / Clear |
|  | Vol+ |  | Vol+ |
|  | Up / CH+ |  | Up |
|  | Up / CH+ |  | CH+ / Page+ |
|  | SAT |  | Shift + 0 |
|  | SAT |  | Display / Media |
|  | Vol- |  | Vol- |
|  | Left / V- |  | Left |
|  | OK |  | OK |
|  | Right / V+ |  | Right |
|  | Recall |  | Back / Return |
|  | Down / CH- |  | CH- / Page- |
|  | Down / CH- |  | Down |
|  | File List |  | Smart / List |
|  | Play |  | Play / Slow |
|  | Stop |  | Stop / Hold |





| Original | Recharge |
|----------------|-----------------------------|
| << | << / Tune- |
| Pause | Pause / Step / Freeze |
| >> | >> / Tune+ |
| Advance | >> / Preset+ |
| Rec | Rec / Rec Mode |
| Slow | Shift + Play / |
| Red / Book | Red / Netflix / Search |
| Red / Book | Shift + Fav / Marker / PC |
| Green | Green / APP / Repeat |
| Yellow / Color | Yellow / YouTube / Repeat |
| Blue / POS | Blue / Prime Video / Random |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |

| Original | Recharge |
|----------|------------------|
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| V-Format | Picture / Format |
| 0 | 0 |
| Wide | Setup / OPT / |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

