



Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Up		Up
	Play		Play / Slow		i		Info / Angle
	Pause		Pause / Step / Freeze		Left		Left
	Stop		Stop / Hold		OK		OK
	Rec		Rec / Rec Mode		Right		Right
	<<		<< / Tune-		Exit		Exit / Cancel / Clear
	>>		>> / Tune+		Down		Down
	Lang		Audio / Lang I/II		Back		Back / Return
	Source (Games)		Eject / Surround		Vol+		Vol+
	Movie-Music-Phot		Picture / Format		World (Violet)		Smart / List
	[≡]..		Zoom / Size		PR+		CH+ / Page+
	*/O		Sleep / Timer		Vol-		Vol-
	TV		TV/Radio /		*/Q		Display / Media
	Q.Menu		D.Menu / Top		PR-		CH- / Page-
	[-O-]		Setup / OPT /		1		1
	[≡]/Text		Text / Goto		2		2





Original		Rechange	
3 def	3	3	3
4 ghi	4	4	4
5 jkl	5	5	5
6 mno	6	6	6
7 pqrs	7	7	7
8 tuv	8	8	8
9 wxyz	9	9	9
Guide	Guide	Guide / EPG / --	
0	0	0	0
Red	Red	Red / Netflix / Search	
Green	Green	Green / APP / Repeat	
Yellow	Yellow	Yellow / YouTube / Repeat	
Blue	Blue	Blue / Prime Video / Random	
Recall	Recall	Shift + Back / Return	

Original	Rechange

