



Original	Rechange
Power	Power
Source (Games)	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV	TV/Radio /
0	0
Recall	Fav / Marker / PC
Vol+	Vol+
Mute	Mute / Dimmer
PR+	CH+ / Page+

Original	Rechange
Vol-	Vol-
World/Internet	Smart / List
PR-	CH- / Page-
Menu	Menu / Home
Q.Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Back	Back / Return
Exit	Exit / Cancel / Clear
i	Info / Angle
Movie-Music-Phot	Display / Media
Guide	Guide / EPG / -/-
*/o	Picture / Format
*/o..	Setup / OPT /





	Original	Recharge	Original	Recharge
	[≡]/Text	 GOTO TEXT		
	Red	 NETFLIX SEARCH		
	Green	 APP REPEAT		
	Yellow	 YouTube REPEAT A-B		
	Blue	 Prime Video RANDOM		
	Lang	 LANG I/II AUDIO		
	[≡]..	 EQ SUBTITLE		
	[-o-]	 SIZE ZOOM		
	<<	 TUNE- TUNE-		
	Pause	 STEP-FREEZE STEP-FREEZE		
	>>	 TUNE+ TUNE+		
	Rec	 REC MODE REC MODE		
	Play	 SLOW SLOW		
	Stop	 HOLD HOLD		

