


Original		Rechange		Original		Rechange	
	Standby		Power		Title / TTX		Text / Goto
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	Play		Play / Slow		Menu / PBC		Menu / Home
	Pause		Pause / Step / Freeze		Up		Up
	Stop		Stop / Hold		Left / Fav-		Left
	Rec		Rec / Rec Mode		Enter		OK
	<<		<< / Tune-		Right / Fav+		Right
	>>		>> / Tune+		Clear		Exit / Cancel / Clear
	I<<		I<< / Preset-		Down		Down
	>>I		>>I / Preset+		Return		Back / Return
	Language		Audio / Lang I/II		Vol+		Vol+
	SUBT / RIP		Subtitle / EQ		L/R		Smart / List
	Open / Close		Eject / Surround		Vol-		Vol-
	Zoom		Zoom / Size		OSD		Display / Media
	Time		Sleep / Timer		1		1
	TV / Radio		TV/Radio /		2		2
	Setup		Setup / OPT /		3		3

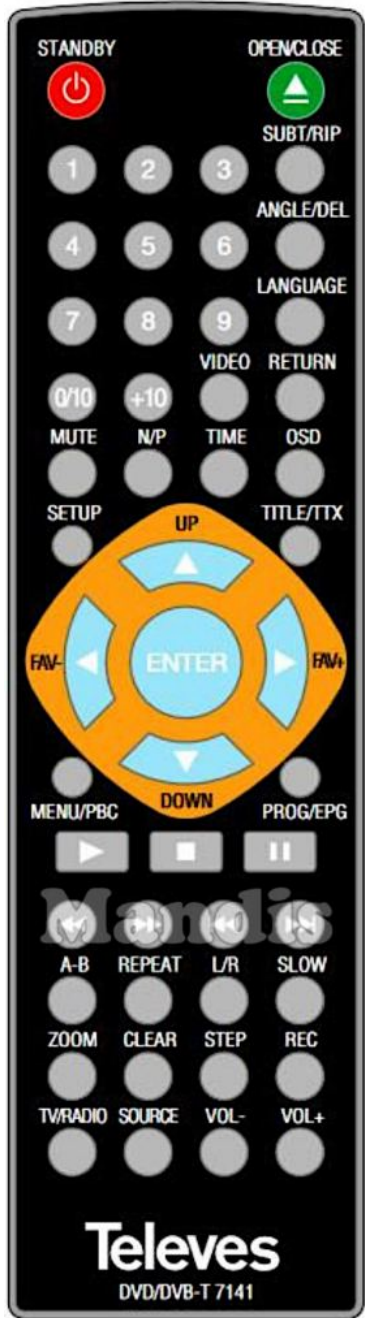



Original	Recharge
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/-
0/10	0
REPEAT	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Slow	Shift + Play /
Step	Shift + Pause / Step /
Prog / EPG	Shift + TV/Radio / Program
Angle / Del	Shift + Back / Return
N/P	Shift + Display / Media
Video	Shift + 4
Prog / EPG	Shift + Guide / EPG / -/-

Original	Recharge

