


 

 









 




 
 



 



 



 









Original		Recharge		Original		Recharge	
	Power		Power		1		1
	Red		Red		2		2
	Green		Green		3		3
	Yellow		Yellow		4		4
	Blue		Blue		5		5
	Audio		Dual		6		6
	[ ]		Info		7		7
	Menu		Menu		8		8
	VT		Smart		9		9
	Violet/Timer		Sleep		0/AV		0
	Text		Text		Mute		Mute
	Func VT		Right				
	Stop		Stop				
	Vol+		Vol +				
	Vol-		Vol -				
	Prog+		Ch +				
	Prog-		Ch -				

