
 


 




 


 
 
 
 








 










 

 



Original		Rechange		Original		Rechange	
	Power		Power		i		Info
	Mute		Mute		APP		Media
	VF		Format		Subtitle		Subt
	AR		3D		Text		Text
	AUX		AV		Audio		Dual
	TV / Radio		TV/R		FAV		Pre Ch
	1		1		EPG		Guide
	2		2		Up		Up
	3		3		Right		Right
	4		4		Down		Down
	5		5		Left		Left
	6		6		OK / List		Ok
	7		7		Menu		Menu
	8		8		Exit		Exit
	9		9		V +		Vol +
	0		0		V -		Vol -
	Previews program		Back		Sleep Timer		Sleep





Original		Rechange	
	Play List		List
	P +		Ch +
	P -		Ch -
	Red / F1		Red
	Green / F2		Green
	Yellow / F3		Yellow
	Blue / F4		Blue
	Rec		Rec
	Stop		Stop
	S		Smart
	*		Options
	<<		<<
	Pause		Pause
	Play		Play
	>>		>>
	I <		I <<
	Slow		Shift + Play

Original		Rechange	
	> <		Shift + Pause
	>		>>

