


 









 

 















 













 





 



 





 
 









Original		Rechange		Original		Rechange	
	Power		Power		4		4
	Mute		Mute		5		5
	Menu		Menu		6		6
	Exit		Exit		7		7
	Guide		Guide		8		8
	Up / P+		Up		9		9
	Up / P+		Ch +		0		0
	Down / P-		Down		Recall		Back
	Down / P-		Ch -		i		Info
	Left / V-		Left		TV / Radio		TV/R
	Left / V-		Vol -		SAT		Smart
	OK		Ok		FAV		Pre Ch
	Right / V+		Right		Audio		Dual
	Right / V+		Vol +		Subtitle		Subt
	1		1		Text		Text
	2		2		Red		Red
	3		3		Green		Green





Original		Recharge		Original	Recharge
	Yellow		Yellow		
	Blue		Blue		
	UHF		Media		
	Sleep		Sleep		
	<<		<<		
	Play		Play		
	Pause		Pause		
	>>		>>		
	Step		Shift + Pause		
	Stop		Stop		
	Rec		Rec		
	Hold		Shift + Stop		

