

























Original	Recharge	Original	Recharge
 Power	 Power	 9	 9
 Sleep	 Sleep / Timer	 EPG	 Guide / EPG / -/-
 Screen	 Picture / Format	 0	 0
 Presets	 Setup / OPT /	 SWAP	 Fav / Marker / PC
 ↔	 TV/Radio /	 Photo/Music/Movi	 D.Menu / Top
 FAV	 Shift + Fav / Marker / PC	 World	 Smart / List
 Lang	 Audio / Lang I/II	 Source	 AV / Input / RDS
 Subtitle	 Subtitle / EQ	 Menu	 Menu / Home
 TXT	 Text / Goto	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 C	 Exit / Cancel / Clear
 6	 6	 Disp.	 Display / Media
 7	 7	 Search Mode	 Shift + Red / Netflix /
 8	 8	 Return	 Back / Return



