 
 
 
 

 











 
 
 

 


 
 





Original		Rechange		Original		Rechange	
	Power		Power		P-		Ch -
	Source		AV		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		OK		Ok
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		Menu		Menu
	8		8		Home		Smart
	9		9		Exit		Exit
	0		0		Back		Back
	Recall		Pre Ch		Guide		Guide
	3D		3D		Text		Text
	Mute		Mute		[>]		Options
	[i+]		Info		Quick		TV/R
	P+		Ch +		*/O		Format





Original		Rechange		Original		Rechange	
	Subtitle		Subt				
	O)/I/II		Dual				
	*/Q		Shift + Format				
	[+ +]		Eject				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Pause		Pause				
	Play		Play				
	Stop		Stop				
	Rec		Rec				
	>>		>>				
	<<		<<				

