






Original	Recharge
Open/Close	Eject / Surround
Input Select	AV / Input / RDS
HDMI	Shift + 0
Standby	Power
1	1
2	2
3	3
Prog+	CH+ / Page+
4	4
5	5
6	6
Prog-	CH- / Page-
7	7
8	8
9	9
Timer Prog	Sleep / Timer
Setup	Setup / OPT /

Original	Recharge
0	0
Clear	Exit / Cancel / Clear
[i+]/Info	Info / Angle
Text	Text / Goto
Variable Replay	Vol+
Variable Skip	Vol-
Guide	Guide / EPG / -/-
Top Menu	D.Menu / Top
Disc Menu	Menu / Home
Up	Up
Left	Left
Enter	OK
Right	Right
Display	Display / Media
Down	Down
Return	Back / Return
Red	Red / Netflix / Search





Original	Recharge	Original	Recharge
 Green	 Green / APP / Repeat	 Rec	 Rec / Rec Mode
 Yellow/Mode	 Yellow / YouTube / Repeat	 Subtitle	 Subtitle / EQ
 Blue/Search	 Blue / Prime Video / Random	 1.3x/0.8x PLY	 Shift + Play /
 Blue/Search	 Shift + Red / Netflix /	 O)/Audio	 Audio / Lang I/II
 <<	 << / Tune-	 Sat Link	 Smart / List
 Play	 Play / Slow		
 >>	 >> / Tune+		
 I<<	 I<< / Preset-		
 Stop	 Stop / Hold		
 >>I	 >>I / Preset+		
 Pause	 Pause / Step / Freeze		
 VCR	 Shift + 4		
 HDD	 Shift + 7		
 DVD	 Shift + 2		
 Time Slip	 TV/Radio /		
 Dubbing	 Picture / Format		
 Rec Mode	 Shift + Rec / Rec Mode		

