



Original	Rechange
A-B	A-B
MUTE	MUTE
DVD/DVB	D. Menu
SOURCE	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
10+	10+
DISPLAY	Info
SUBTITLE	Subt

Original	Rechange
ANGLE	ANGLE
AUDIO	AUDIO
MENU	MENU
TITLE / TV/RADIO	TITLE / TV/RADIO
RETURN	RETURN
SEARCH	SEARCH
SLOW	Slow
UP	UP
LEFT	LEFT
ENTER	ENTER
RIGHT	RIGHT
DOWN	DOWN
SETUP	SETUP
VOL-	VOL-
VOL+	VOL+
PLAY	PLAY
PAUSE	PAUSE





Original	Recharge	Original	Recharge
 STOP	 Stop		
 RED	 Red		
 SKIP PREV.	 I<<		
 SKIP PREV.	 Ch -		
 GREEN	 Green		
 SKIP NEXT	 >>I		
 SKIP NEXT	 Ch +		
 REW	 <<		
 YELLOW	 Yellow		
 FWD	 >>		
 BLUE	 Blue		
 PROGRAM / TTX	 Text		
 REPEAT	 Shift + Text		

