



 





 

 

 



















 







	Original	Rechange
	Mute	 Mute / Dimmer
	Still	 Shift + Pause / Step /
	I/II	 Audio / Lang I/II
	Power	 Power
	Scan	 Smart / List
	Sleep	 Sleep / Timer
	PIP	 Picture / Format
	Display	 Display / Media
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9

	Original	Rechange
	TV/AV	 AV / Input / RDS
	0	 0
	Swap	 Back / Return
	P.STD	 Setup / OPT /
	S.STD	 Sound / Title
	Up	 Up
	CH+	 CH+ / Page+
	Vol-	 Vol-
	Left	 Left
	Menu	 Menu / Home
	OK	 OK
	Right	 Right
	Vol+	 Vol+
	CH-	 CH- / Page-
	Down	 Down
	[=]	 Text / Goto
	[+]	 Subtitle / EQ





Original	Recharge	Original	Recharge
[=]	PROGRAM TV/RADIO /		
<</[...]	TUNE- << / Tune-		
>>/[?]	TUNE+ >> / Tune+		
[X]	PC FAV MARKER Fav / Marker / PC		
Red/↑	NETFLIX SEARCH Red / Netflix / Search		
Green/←	APP REPEAT Green / APP / Repeat		
Yellow/→	YouTube REPEAT A-B Yellow / YouTube / Repeat		
Blue/Enter/H.Lock	Prime Video RANDOM Blue / Prime Video / Random		
White/↓/CH.List	GUIDE EPG Guide / EPG / -/--		
Pause/Timer	STEP-FREEZE Pause / Step / Freeze		
[♦]/Zoom	SIZE ZOOM Zoom / Size		
Exit	CLEAR EXIT CANCEL Exit / Cancel / Clear		

