 
 


 
 


 
 


 




 



 



 
 
 


 

 


 


 
 

 

 




	Original	Rechange	Original	Rechange
	Power			
	Mute			
	1			
	2			
	3			
	4			
	5			
	6			
	7			 +  Shift + Dual
	8			 Format
	9			 Ch +
	0			 Ch -
	Audio			 Sleep
	Recall			 3D
	Tv Menu			 Options
	Source			 Media
	CH List			 Text





Original		Rechange		Original		Rechange	
	EPG		Guide		I<<		I<<
	FAV		Pre Ch		>>I		>>I
	Info		Info		Play		Play
	Red		Red		Pause		Pause
	Green		Green		Stop		Stop
	Yellow		Yellow		Rec/Rep		Rec
	Blue		Blue				
	DTV		TV/R				
	Hold		Eject				
	List		Shift + List				
	Subpage		Shift + Subt				
	Index		Smart				
	PVR List		D. Menu				
	Mix		Shift + 3D				
	Subtitle		Subt				
	<<		<<				
	>>		>>				

