



















 






 











 






 







 
 



 



 






	Original	Rechange
	Power	 Power
	Tv/AV	 AV
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	-/--	 Shift + Guide
	Eject	 Eject
	Play/Pause	 Play
	Stop	 Stop
	Return	 Back

	Original	Rechange
	Mute	 Mute
	Vol+	 Vol +
	Vol-	 Vol -
	Up	 Up
	CH+	 Ch +
	CH-	 Ch -
	Down	 Down
	Right	 Right
	Left	 Left
	Sys Menu	 Menu
	Display	 Shift + Info
	OK	 Ok
	Picture	 Format
	Sound	 Dual
	Timer	 Shift + AV
	Nicam/A2	 Media
	Lan/Prog-	 Shift + Ch -



