










 

 


 


 






 




 



 

 








 
 

 
 
 




	Original	Rechange	Original	Rechange
	Power			Rec
	Home			Stop
	1			Pause
	2			Play
	3			Vol+
	4			Vol-
	5			Setup
	6			I<< Prev
	7			>>I Next
	8			<< FR
	9			>> FF
	0			Up
	Goto			Left
	Mute			Enter
	Display			Right
	Audio			Down
	Subtitle			Browser
				Media





Original		Recharge		Original		Recharge	
	Return		Back				
	Red / Slow		Red				
	Green / TimeShift		Green				
	Yellow / CM Skip		Yellow				
	Blue / Replay		Blue				
	Repeat		Text				
	Zoom		Eject				
	Copy		3D				
	TV System		TV/R				
	Source		AV				
	EPG		Guide				
	Edit		Format				
	Timer	 + 	Shift + AV				

