









Original	Rechange
Power	Power
DTV/ATV	Display / Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	+ Shift + Guide / EPG / -/--
Recall	Back / Return
P.Mode	Picture / Format
S.Mode	Sound / Title
Aspect	Zoom / Size

Original	Rechange
Menu	Menu / Home
Source	AV / Input / RDS
Exit	Exit / Cancel / Clear
i	Info / Angle
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK
V+	Vol+
V-	Vol-
Mute	Mute / Dimmer
MTS	Eject / Surround
Timer	Sleep / Timer
P+	CH+ / Page+
P-	CH- / Page-
Red	Red / Netflix / Search





Original	Recharge
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 TTX	 Text / Goto
 Subtitle	 Subtitle / EQ
 DTV/Radio/Repeat	 TV/Radio /
 List	 Smart / List
 FAV	 Fav / Marker / PC
 EPG	 Guide / EPG / -/--
 Rec	 Rec / Rec Mode

Original	Recharge
 Rec Menu	 D.Menu / Top
 T-Shift	 Setup / OPT /
 Still	 Audio / Lang I/II

