



Original		Rechange		Original		Rechange	
	Power		Power		Guide / EPG / -/--		Guide / EPG / -/--
	Up / P+		Up		0		0
	Up / P+		CH+ / Page+		P < P		Fav / Marker / PC
	Menu		Menu / Home		PP		Back / Return
	Left		Left		Vol+		Vol+
	Right		Right		I-II		Audio / Lang I/II
	Down / P-		Down		Mute		Mute / Dimmer
	Down / P-		CH- / Page-		Vol-		Vol-
	1		1		Info		Info / Angle
	2		2		Red		Red / Netflix / Search
	3		3		Green		Green / APP / Repeat
	4		4		Yellow		Yellow / YouTube / Repeat
	5		5		Blue		Blue / Prime Video / Random
	6		6		[TV]		Shift + 1
	7		7		[TV]		TV/Radio /
	8		8		[AV]		AV / Input / RDS
	9		9		[≡]		Text / Goto









 

 

 

 
 
 

 



















Original		Rechange		Original		Rechange	
	[≡⊕]		Subtitle / EQ				
	[/≡]		Picture / Format				
	[≡X]		Exit / Cancel / Clear				
	[≡↕]		Zoom / Size				
	[≡?]		Display / Media				
	[≡i]		Smart / List				





Original	Rechange
 Power	 Power
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Menu	 Menu / Home
 Left	 Left
 Select	 OK
 Right	 Right
 Down / P-	 CH- / Page-
 Down / P-	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Rechange
 9	 9
 +10	 Guide / EPG / -/-
 0	 0
 Repeat	 Green / APP / Repeat
 Search	 Red / Netflix / Search
 A→B	 Yellow / YouTube / Repeat
 Display	 Display / Media
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Zoom	 Zoom / Size
 Prog	 TV/Radio /
 C	 Blue / Prime Video / Random
 Angle	 Info / Angle
 Return	 Back / Return
 Time	 Sleep / Timer
 <<	 << / Tune-
 >>	 >> / Tune+









































































	Original	Recharge	Original	Recharge
		I<< / Preset-		
		>>I / Preset+		
		Play / Slow		
		Pause / Step / Freeze		
		Stop / Hold		
	Title	Sound / Title		
	Open / Close	Eject / Surround		





Original	Rechange	Original	Rechange
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Tone+	 >> / Tune+	Volume+	 Vol+
Lang	 Sound / Title	Chan.Up	 CH+ / Page+
Menu audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	1	 1
Return TV	 TV/Radio /	2	 2
Menu video	 D.Menu / Top	3	 3
Text	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	 OK	9	 9

Original	Rechange	Original	Rechange
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Tone+	 >> / Tune+	Volume+	 Vol+
Lang	 Sound / Title	Chan.Up	 CH+ / Page+
Menu audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	1	 1
Return TV	 TV/Radio /	2	 2
Menu video	 D.Menu / Top	3	 3
Text	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	 OK	9	 9





Original	Recharge	Original	Recharge
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Lang	 Shift + Audio / Lang I/II		

Original	Recharge

