



| Original |                  | Rechange |                       | Original |                | Rechange |                       |
|----------|------------------|----------|-----------------------|----------|----------------|----------|-----------------------|
|          | Power            |          | Power                 |          | Menu           |          | Menu / Home           |
|          | Mute             |          | Mute / Dimmer         |          | Up             |          | Up                    |
|          | Play             |          | Play / Slow           |          | i              |          | Info / Angle          |
|          | Pause            |          | Pause / Step / Freeze |          | Left           |          | Left                  |
|          | Stop             |          | Stop / Hold           |          | OK             |          | OK                    |
|          | Rec              |          | Rec / Rec Mode        |          | Right          |          | Right                 |
|          | <<               |          | << / Tune-            |          | Exit           |          | Exit / Cancel / Clear |
|          | >>               |          | >> / Tune+            |          | Down           |          | Down                  |
|          | Lang             |          | Audio / Lang I/II     |          | Back           |          | Back / Return         |
|          | Source (Games)   |          | Eject / Surround      |          | Vol+           |          | Vol+                  |
|          | Movie-Music-Phot |          | Picture / Format      |          | World (Violet) |          | Smart / List          |
|          | [≡]..            |          | Zoom / Size           |          | CH+ / Page+    |          | CH+ / Page+           |
|          | */O              |          | Sleep / Timer         |          | Vol-           |          | Vol-                  |
|          | TV               |          | TV/Radio /            |          | */Q            |          | Display / Media       |
|          | Q.Menu           |          | D.Menu / Top          |          | PR-            |          | CH- / Page-           |
|          | [-O-]            |          | Setup / OPT /         |          | 1              |          | 1                     |
|          | [≡]/Text         |          | Text / Goto           |          | 2              |          | 2                     |



