






| Original | Rechange |
|---|---|
|  Power |  Power |
|  V-Mode |  D.Menu / Top |
|  Mute |  Mute / Dimmer |
|  SAT |  Shift + 0 |
|  SAT |  Display / Media |
|  TV / AV |  AV / Input / RDS |
|  Zoom |  Zoom / Size |
|  Sleep |  Sleep / Timer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  FAV |  Fav / Marker / PC |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Pause |  Pause / Step / Freeze |
|  7 |  7 |

| Original | Rechange |
|---|---|
|  8 |  8 |
|  9 |  9 |
|  Page + |  Shift + CH+ / |
|  TV / Radio |  TV/Radio / |
|  0 |  0 |
|  <-- PR |  Back / Return |
|  Page - |  Shift + CH- / |
|  Up / PR + |  CH+ / Page+ |
|  Up / PR + |  Up |
|  Left / Vol - |  Left |
|  Left / Vol - |  Vol- |
|  OK / List |  Smart / List |
|  OK / List |  OK |
|  Right / Vol + |  Right |
|  Right / Vol + |  Vol+ |
|  Down / PR - |  CH- / Page- |
|  Down / PR - |  Down |





| Original | Rechange |
|----------|-----------------------------|
| | Menu / Home |
| | Exit / Cancel / Clear |
| | Info / Angle |
| | Guide / EPG / -/-- |
| | Red / Netflix / Search |
| | Picture / Format |
| | Green / APP / Repeat |
| | Text / Goto |
| | Yellow / YouTube / Repeat |
| | Audio / Lang I/II |
| | Blue / Prime Video / Random |
| | Rec / Rec Mode |
| | Play / Slow |
| | Stop / Hold |
| | Setup / OPT / |
| | << / Tune- |
| | >> / Tune+ |

| Original | Rechange |
|----------|---------------|
| | I<< / Preset- |
| | >>I / Preset+ |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

