

 

 







 





 



 





Original	Rechange
Power	Power
Mute	Mute / Dimmer
PIP-	Shift + CH- /
PIP	Zoom / Size
PIP+	Shift + CH+ /
Wide	Picture / Format
Swap	Smart / List
Lang(AD)	Audio / Lang I/II
Timers	Sleep / Timer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Rechange
9	9
Text	Text / Goto
0	0
AV	AV / Input / RDS
i	Info / Angle
Vol+	Vol+
Tv/Radio	TV/Radio /
PR+	CH+ / Page+
Vol-	Vol-
FAV	Fav / Marker / PC
PR-	CH- / Page-
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Guide	Guide / EPG / -/--
Up	Up





Original		Rechange		Original	Rechange
	Exit		Exit / Cancel / Clear		
	Left		Left		
	OK		OK		
	Right		Right		
	Menu		Menu / Home		
	Down		Down		
	Back/P<P		Back / Return		
	Subtitle		Subtitle / EQ		
	<<		<< / Tune-		
	Play		Play / Slow		
	>>		>> / Tune+		
	LIB		Setup / OPT /		
	Stop		Stop / Hold		
	Pause		Pause / Step / Freeze		
	Rec		Rec / Rec Mode		

