
 
 


 

 
 
 
 



 


 





 
 

 

 

 
 




Original	Recharge	Original	Recharge
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Media	Menu Off	 Exit
Txt Stop	 Stop	Menu Down	 Down
Reveal	 Smart	Back	 Back
Subt.List	 Subt	Volume+	 Vol +
Info	 Info	Menu audio	 Dual
Sleep Timer	 Sleep	Chan.Up	 Ch +
Return TV	 TV/R	Volume-	 Vol -
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Shift + Info	6	 6
Menu Left	 Left	7	 7



Original	Recharge	Original	Recharge
8	 8	Still	 +  Shift + 4
9	 9	Camera	 +  Shift + 7
Guide -/-- 1.	 Guide	Clear	 +  Shift + 9
0/10	 0	Surround	 +  Shift + Red
2.Fav P/C 2.	 Pre Ch	Level L	 +  Shift + Yellow
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		
Rotate Text	 +  Shift + Mute		
Mix Scan	 +  Shift + TV/R		
Disp	 List		
Color- S.Std	 Options		
Store Text	 +  Shift + Text		
AV 2	 +  Shift + AV		
Contrast+	 +  Shift + Ch +		
Contrast-	 +  Shift + Ch -		

