

 

 
 
 

 


 
 
 


 



 





 
 
 

 


 

 


 

 

 






 


 


 
 
 
 
 
 

 
 










Original	Rechange	Original	Rechange
 Power	 Power	 Pause	 Pause
 1	 1	 Stop	 Stop
 2	 2	 >>	 >>
 3	 3	 <<	 <<
 4	 4	 >>	 >>
 6	 6	  <<	  <<
 5	 5	 Option	 Options
 7	 7	 Display	 Info
 8	 8	 Enter	 Ok
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 Vol+	 Vol +	 Right	 Right
 Vol-	 Vol -	 Left	 Left
 Mute	 Mute	 Folder Up	 Ch +
 Repeat	 Text	 Folder Down	 Ch -
 Shuffle	 Media	 Clear	 Exit
 Play	 Play	 Sleep	 Sleep





Original	Rechange
<b>DIMMER</b> Dimmer	<b>SEARCH TV/R</b> TV/R
<b>TP</b> TP	<b>FAV PRE-CH</b> Pre Ch
<b>MONO</b> Mono	<b>SOUND DUAL</b> Dual
<b>PRESET</b> Preset Up	<b>SHIFT</b> +  Shift + Up
<b>PRESET</b> Preset Down	<b>SHIFT</b> +  Shift + Down
<b>MEMORY</b> Memory	<b>REC MODE</b> Rec
<b>TUNING</b> Tuning Up	<b>B</b> Green
<b>TUNING</b> Tuning Down	<b>A</b> Red
<b>CD</b> CD	<b>SHIFT</b> + <b>1</b> Shift + 1
<b>USB</b> USB	<b>SHIFT</b> + <b>2</b> Shift + 2
<b>AUX</b> AUX	<b>SHIFT</b> + <b>3</b> Shift + 3
<b>TUNER</b> Tuner	<b>SHIFT</b> + <b>4</b> Shift + 4
<b>iPod</b> iPod	<b>SHIFT</b> + <b>5</b> Shift + 5
<b>Folder Up iPod</b>	<b>SHIFT</b> + <b>+ CH</b> Shift + Ch +
<b>Folder Down iPod</b>	<b>SHIFT</b> + <b>- CH</b> Shift + Ch -
<b>REPEAT</b> Repeat iPod	<b>HOME SMART</b> Smart
<b>SHUFFLE</b> Shuffle iPod	<b>SHIFT</b> + <b>APP MEDIA</b> Shift + Media

Original	Rechange
<b>ENTER</b> Enter iPod	<b>SHIFT</b> + <b>OK</b> Shift + Ok
<b>&gt;&gt;I</b> >>I iPod	<b>SHIFT</b> +  Shift + Right
<b>I&lt;&lt;</b> I<< iPod	<b>SHIFT</b> +  Shift + Left
<b>MENU</b> Menu iPod	<b>TOP MENU MENU</b> Menu
<b>Play/Pause iPod</b>	<b>SHIFT</b> + <b>PLAY MODE</b> Shift + Play
<b>Open/Close</b>	<b>ZOOM</b> Eject
<b>CLOCK</b> Clock	<b>E-MANUAL D.MENU</b> D. Menu
<b>TIMER</b> Timer	<b>TIMER AV</b> AV

