









 



 

 
 




Original	Recharge	Original	Recharge
Power	Power	Memory	D. Menu
Sleep	Sleep	Preset Tuner Up	Shift + Up
1 HDMI	1	Preset Tuner	Shift + Down
2 HDMI	2	Tuning Up	Ch +
3 HDMI	3	Tuning Down	Ch -
4 HDMI	4	Info	Info
1 AV	5	Movie	I<<
2 AV	6	Surr.Decode	>>I
3 AV	7	Music	<<
4 AV	8	Straight	Play
5 AV	9	Stereo/Enhance	>>
1 Audio	Guide	BD/DVD	Red
2 Audio	0	TV	Green
V-AUX	AV	CD	Yellow
Tuner	Pre Ch	Radio	Blue
FM Tuner	Smart	Return	Back
AM Tuner	Media	Setup	Menu





Original		Recharge		Original		Recharge	
	Option		Options				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	Enter		Ok				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				

