



 
 

 
 

 





 


 
 
 
 

 
 
 




 






Original	Rechange	Original	Rechange
	Power		Power
	Enhancer		Media
	Beam		Smart
	HDMI1		1
	HDMI2		2
	Optical		5
	HDMI3		3
	HDMI4		4
	Analog		6
	TV		7
	AUX		8
	YIT		9
	Movie		Red
	Music		Green
	Entertainment		Yellow
	Off		Blue
	Surround		Subt

Original	Rechange	Original	Rechange
	Stereo		Dual
	Setup		Menu
	Return		Back
	Target		Guide
	Option		Options
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Subwoofer+		Ch +
	Subwoofer-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Uni Volume		Pre Ch





Original	Rechange
System Memory	Shift + 1
System Memory	Shift + 2
System Memory	Shift + 3
FM	3D
< Preset	Shift + Left
Preset >	Shift + Right
Memory	Rec
<< Tuning	Shift + <<
Tuning >>	Shift + >>
CH Level	Text
Remote	AV
Eco	Shift + 3D
USB	TV/R
Play	Play
iPod Control	D. Menu
<<	<<
Stop	Stop

Original	Rechange
>>	>>
<<	<<
Pause	Pause
>>	>>

