


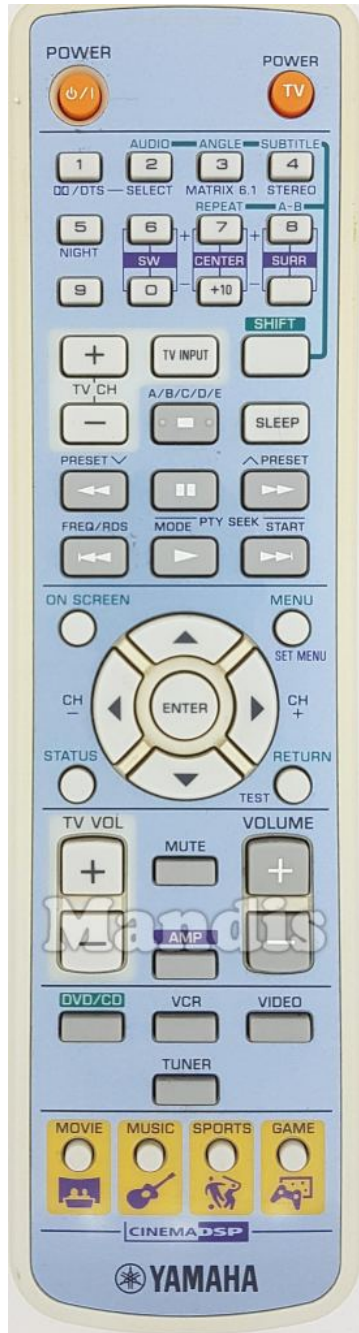


 

 





 

 

 

 


 




Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Stop/A/B/C/D/E	 Stop
 <</Preset	 <<
 >>/Preset Up	 >>
 >>I/PTY SEEK	 >>I
 I<</Freq/RDS	 I<<
 Play/PTY SEEK	 Play

Original	Rechange
 Pause	 Pause
 Sleep	 Sleep
 On screen	 Info
 Menu	 Menu
 Set Menu	 D. Menu
 VCR	 Green
 Video	 Yellow
 DVD/CD	 Blue
 Tuner	 Red
 Status	 Media
 Return	 Back
 Test	 Guide
 Mute	 Mute
 Up	 Up
 Enter	 Ok
 Down	 Down
 Right/CH+	 Right







	Original	Recharge
	Left/CH-	 Left
	Volume+	 Vol +
	Volume-	 Vol -
	Music	 3D
	Game	 AV
	Sports	 Eject
	Movie	 Format
	[oo]/DTS	 Shift + Dual
	Select	 List
	Matrix 6.1	 Smart
	Stereo	 Options
	Night	 Shift + 5
	SW+	 Shift + 7
	Center+	 Shift + 8
	SURR+	 Shift + 9
	SURR-	 Shift + Pre Ch
	SW-	 Shift + Guide

	Original	Recharge
	Center-	 Shift + 0
	Angle	 Pre Ch
	Audio	 Dual
	Subtitle	 Subt
	Repeat	 Text
	A-B	 TV/R



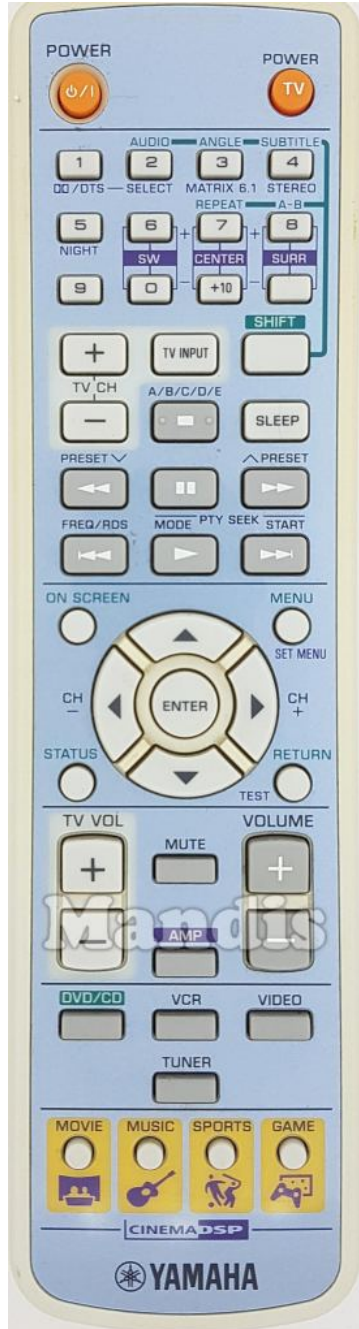

	Original	Recharge		Original	Recharge
	Power Tv		Power		
	Tv CH+		Ch +		
	Tv CH-		Ch -		
	Tv Input		AV		
	Tv Vol+		Vol +		
	Tv Vol-		Vol -		





	Original	Rechange		Original	Rechange
	Power		Power		Mute
	1		1		DVD/CD
	2		2		VCR
	3		3		Video
	4		4		Tuner
	5		5		
	6		6		
	7		7		
	8		8		
	Stop/A/B/C/D/E		Stop		
	<</Preset		<<		
	>>/Preset Up		>>		
	I<<		I<<		
	Play		Play		
	>>I		>>I		
	Volume+		Vol +		
	Volume-		Vol -		

	Original	Rechange		Original	Rechange
	Mute		Mute		
	Blue		Blue		
	Green		Green		
	Yellow		Yellow		
	Red		Red		

